

AMAL Carburettor Parts

Drawing No.	Description	275	276	289
1	Cable Adjuster	4/035	4/035	4/035
2	Ferrule	6/132	6/132	6/132
3	Cable Adjusting Nuts	5/077	5/077	5/077
4	Mixing Chamber Top	4/032	6/032	29/042 Rudge 29/143
5	Mixing Chamber Top Ring	4/031	6/031	29/041
6	Air Valve Guide	5/047	6/047	29/057
7	Needle Clip	4/230	4/230	4/230
8	Throttle Valve Spring	4/037	4/037	29/047
9	Cotter Pin	4/060	4/060	4/060
10	Throttle Valve (Specify Size)	5/052	6/052	29/062
11	Pilot Screw Spring	4/148	4/148	4/148
12	Pilot Screw	13/129	13/129	13/129
13	Float Chamber Top	14/208	14/208	14/208
14	Tickler Kit	RK276/1	RK276/1	RK276/1
15	Float - Plastic	RKC525	RKC525	RKC525
16	Float Chamber			
17	Float Chamber Needle	14/024	14/024	14/024
18	Washers	14/175	14/175	14/175
19	Setting Locknut	14/178	14/178	14/178
20	Petrol Union	14/026	14/026	14/026
21	Petrol Union Nut	14/042	14/042	14/042
22	Spring Retaining Screw	4/241	4/124	4/241
23	Mixing Chamber Cap Spring	4/235	4/235	29/201
24	Needle	5/065	6/065	29/075
25	Air Valve Spring	4/046	4/046	4/046
26	Air Valve	5/045	6/045	29/055
27	Air Intake Tube	4/038	6/038	29/048
28	Flange Gasket	622/498	622/500	622/500
29	Jet Block	Not Available		
30	Washer	4/040	6/040	29/050
31	Mixing Chamber Union Nut	4/062	6/062	29/078
32	Needle Jet - Specify Size	4/061	4/061	29/076
33	Main Jet - Specify Size	4/042	4/042	4/042
34	Plug Screw	64/353	64/353	64/353
35	Washer	4/053	4/053	4/053
36	Washer	23/110	23/110	23/110
37	Throttle Screw Locknut	16/010	16/010	16/010
38	Throttle Screw	4/063	4/063	4/063
39	Float Chamber Holding Bolt	4/043	4/043	29/077
40	Float Chamber Cap Locking Screw	14/021	14/021	14/021
	Gasket / Washer Kit	RK4/5	RK6/1	RKC531
	Rudge Gasket / Washer Kit	275	276	289

